


NOTES:

1. CROSS-BRACING TO BE AT THE SAME PLANE AS THE BRACED WEB.
2. CROSS-BRACING TO CROSS OVER MINIMUM 3 TRUSSES TO ACHIEVE APPROXIMATE 45° ANGLE.
3. USE MINIMUM 3 - 3" COMMON NAILS TO INTERSECTION OF BRACE TO EACH CONT. LATERAL BRACING AND EACH TRUSS (PROVIDE BLOCKING WHERE REQUIRED).

FARM CROSS BRACING DETAIL

NOT TO SCALE

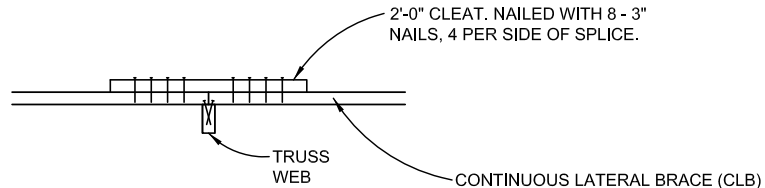

OPTION A

NOT TO SCALE

