


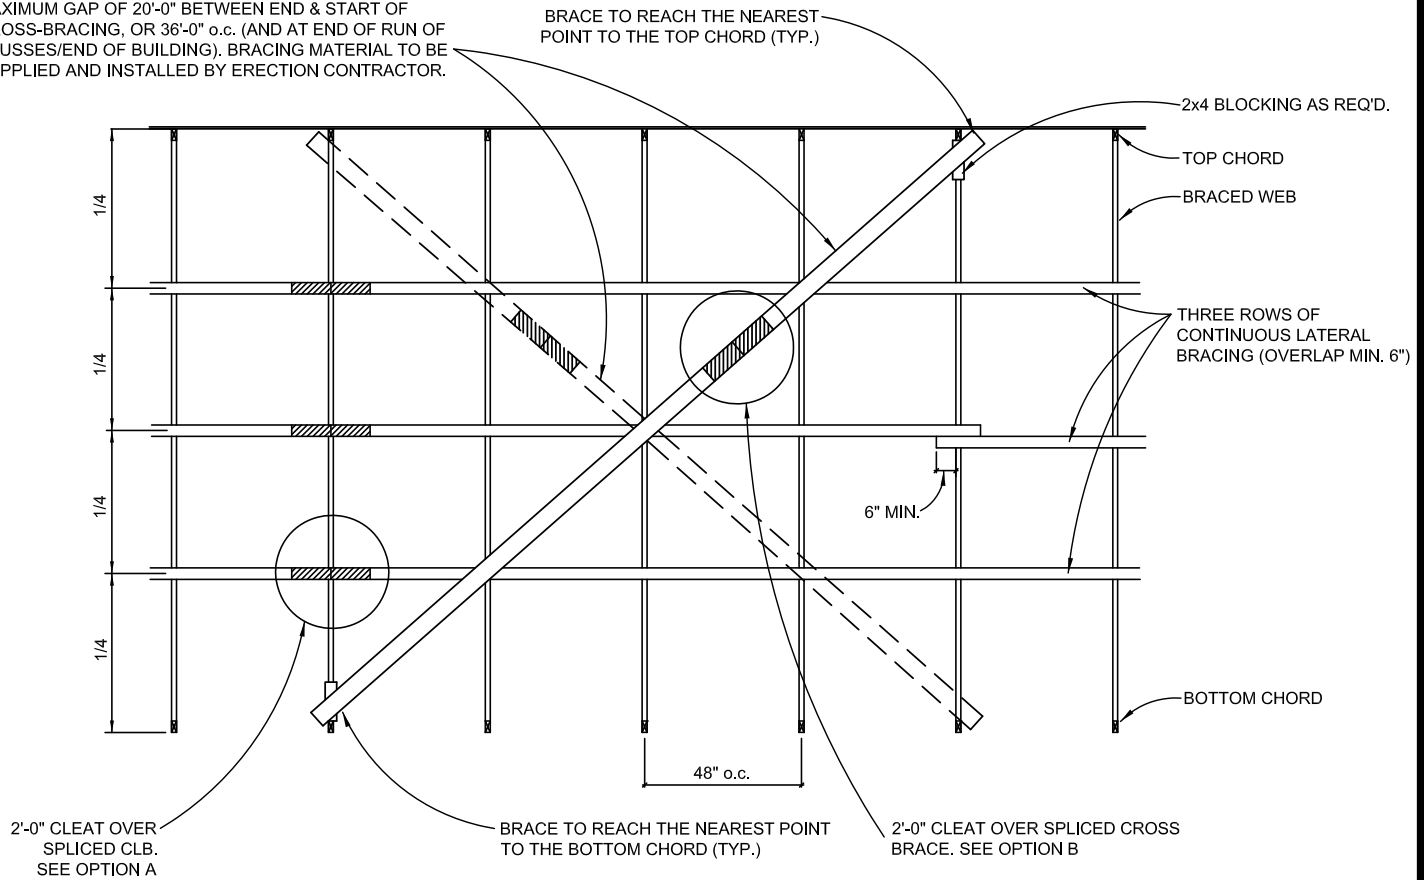

2x6 ON FLAT CROSS-BRACING TO BRACED WEB WITH A MAXIMUM GAP OF 20'-0" BETWEEN END & START OF CROSS-BRACING, OR 36'-0" o.c. (AND AT END OF RUN OF TRUSSES/END OF BUILDING), BRACING MATERIAL TO BE SUPPLIED AND INSTALLED BY ERECTION CONTRACTOR.




**NOTES:**

1. CROSS-BRACING TO BE AT THE SAME PLANE AS THE BRACED WEB.
2. CROSS-BRACING TO CROSS OVER 5 TRUSSES TO ACHIEVE APPROXIMATE 45° ANGLE.
3. USE MINIMUM 3 - 3" COMMON NAILS TO INTERSECTION OF BRACE TO EACH CONT. LATERAL BRACING AND EACH TRUSS (PROVIDE BLOCKING WHERE REQUIRED).


**FARM CROSS BRACING DETAIL**

NOT TO SCALE

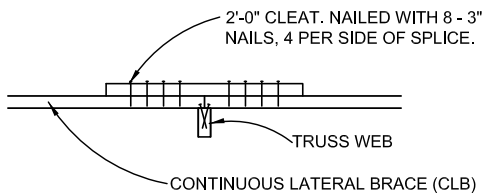

**OPTION A**

NOT TO SCALE

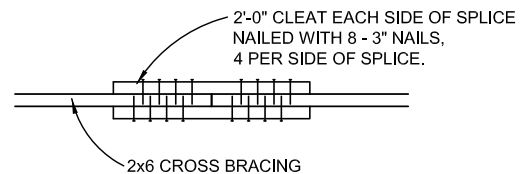

**OPTION B**

NOT TO SCALE

