
SHEET: DS-10A



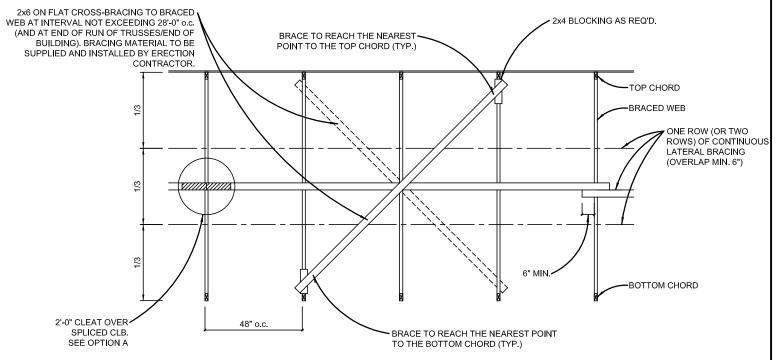


## NOTES:

- 1. CROSS-BRACING TO BE AT THE SAME PLANE AS THE BRACED WEB.
- 2. CROSS-BRACING TO CROSS OVER MINIMUM 3 TRUSSES TO ACHIEVE APPROXIMATE  $45^{\circ}$  ANGLE.
- 3. USE MINIMUM 3 3" COMMON NAILS TO INTERSECTION OF BRACE TO EACH CONT. LATERAL BRACING AND EACH TRUSS (PROVIDE BLOCKING WHERE REQUIRED).

## **FARM CROSS BRACING DETAIL**

NOT TO SCALE

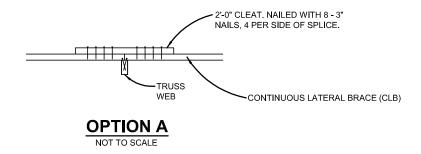

alliancetruss.com | 1.604.574.3525